

Walnut combines thoughtful modern design with old-world craft.

🌐 walnutstudiolo.com
📞 503.447.6889

“The St. Johns” Leather Drawer Pull Installation Instructions



- Gather your tools: drill or screwdriver, ruler, pencil.
- **For No Hardware / Wood Screws:** If you are installing directly into the wood, ask your local hardware store for a “pan head” #8 or M4 wood screw (pointy end) at least ½-inch long to connect the leather directly into the wood on the finished side. Mark the spot where it will go with the ruler and pencil. Pre-drill if necessary. Thread wood screw through leather and install wood screw into surface with screwdriver or drill.
- **For Hardware Included:** Mark the spot where the hardware will go with the ruler and pencil then drill a pilot hole using a 1/8” drill bit. Using the pilot hole as the center, next drill a hole using 7/32” drill bit.
- Thread the provided Chicago screw (surfaceless head) and (optional) washer through the leather and into the hole you drilled in the door/drawer.
- The hardware provided includes 2-4 back screws of different lengths for doors and drawers of differing widths. Choose the back screw that fits your project the best.
- Secure the pull by inserting and tightening the chosen back screw into the Chicago screw on the backside of the door/drawer. Nicely done!

We'd love to see pictures of your installations! Share them with us at walnutstudiolo@gmail.com, or find us on social media as @walnutstudiolo.

What to do with that extra hardware?

We include duplicate hardware with your handle for max flexibility. Instead of throwing away, you could:
a) keep it for future use, in case you want to move the handles, b) recycle it with mixed metals, or
c) mail it back to us for re-use: Walnut Studiolo – Reuse Program, 36005 Hwy 53, Nehalem OR 97131.



walnut



Walnut combines thoughtful modern design with old-world craft.

🌐 walnutstudiolo.com
📞 503.447.6889

“The St. Johns” Leather Drawer Pull Installation Instructions



- Gather your tools: drill or screwdriver, ruler, pencil.
- **For No Hardware / Wood Screws:** If you are installing directly into the wood, ask your local hardware store for a “pan head” #8 or M4 wood screw (pointy end) at least ½-inch long to connect the leather directly into the wood on the finished side. Mark the spot where it will go with the ruler and pencil. Pre-drill if necessary. Thread wood screw through leather and install wood screw into surface with screwdriver or drill.
- **For Hardware Included:** Mark the spot where the hardware will go with the ruler and pencil then drill a pilot hole using a 1/8” drill bit. Using the pilot hole as the center, next drill a hole using 7/32” drill bit.
- Thread the provided Chicago screw (surfaceless head) and (optional) washer through the leather and into the hole you drilled in the door/drawer.
- The hardware provided includes 2-4 back screws of different lengths for doors and drawers of differing widths. Choose the back screw that fits your project the best.
- Secure the pull by inserting and tightening the chosen back screw into the Chicago screw on the backside of the door/drawer. Nicely done!

We'd love to see pictures of your installations! Share them with us at walnutstudiolo@gmail.com, or find us on social media as @walnutstudiolo.

What to do with that extra hardware?

We include duplicate hardware with your handle for max flexibility. Instead of throwing away, you could:
a) keep it for future use, in case you want to move the handles, b) recycle it with mixed metals, or
c) mail it back to us for re-use: Walnut Studiolo – Reuse Program, 36005 Hwy 53, Nehalem OR 97131.




walnut



Cabinet surface


Chicago screw
(with internal
threading)

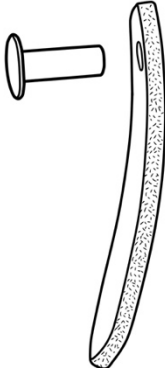

Back screw
(different lengths
for different
cabinet widths)

Cabinet surface

Chicago screw
(with internal
threading)

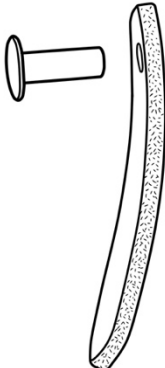

Back screw
(different lengths
for different
cabinet widths)